



BLUEDRY

BLUEDRY USER MANUAL
Model HD-BD1053



PLEASE READ CAREFULLY THROUGH THIS MANUAL BEFORE USING THE PRODUCT, OBSERVING ALL SAFETY INFORMATION, WARNINGS.

1. WARNING

- This product is intended for installation by a qualified service person.
- Disconnect power at the service breaker before installing or servicing.
- Failure to properly ground unit could result in severe electrical shock.

2. NOTE

Do not install dryer over washbasin. If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard. Means for disconnection must be incorporated in the fixed wiring in accordance with the current wiring regulations.

3. SPECIFICATION

Voltage:

220V-240V 50/60Hz, 8.2A, 2000W

110V-120V, 60Hz, 16.4A, 2000W

Air Temperature: 50°C (D=10CM, Room Temp.=25°C)

Air Velocity: 13M/S

Air Flow: 80M³/H

Drying Time: 35-40S

Sensor Range: 5-15CM


Protection Level: IPX1

Electric Isolation: CLASS 2

Brush Motor: 2300R/M

Noise(at 1M): 60dB

Cabinet Material: ABS Plastic

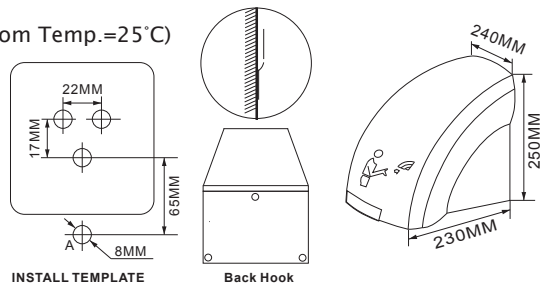

4. INSTALLATION

1. Installation must be carried out in accordance with the current edition of the local wiring regulations code having jurisdiction. Installation should be performed only by a qualified electrician.
2. Drill 4 mounting holes with Dia. 8mm (5/16") as the installation diagram size.
3. Mount hand dryer back support on the wall.
4. Hang hand dryer on the back support by pulling from up to down.
5. Secure the dryer by the screw on hole "A" to avoid theft.
6. Connect the hand dryer plug to the power supply. Connect wire as follows if the dryer is ordered without plug:
 - A. Connect the live wire (Coloured Brown or Red) to the terminal block marked "L".
 - B. Connect the neutral wire (Coloured Black or Blue) to the terminal block marked "N".

5. OPERATION

- No-touch operation.
- Shake excess water from hands.
- Place hands under the outlet to start operation.
- Rub hands lightly and rapidly.
- Stops automatically after hands are removed.

